



CEMA
VENDING

Coffetek X1 Mia User Guide



Contents Page

1. Internal/External Parts
2. Cleaning Products
3. Cleaning and Caring for Your Machine
4. Daily Cleaning
5. Weekly Cleaning
6. Fortnightly Cleaning
7. Troubleshooting

1. Internal / External Parts


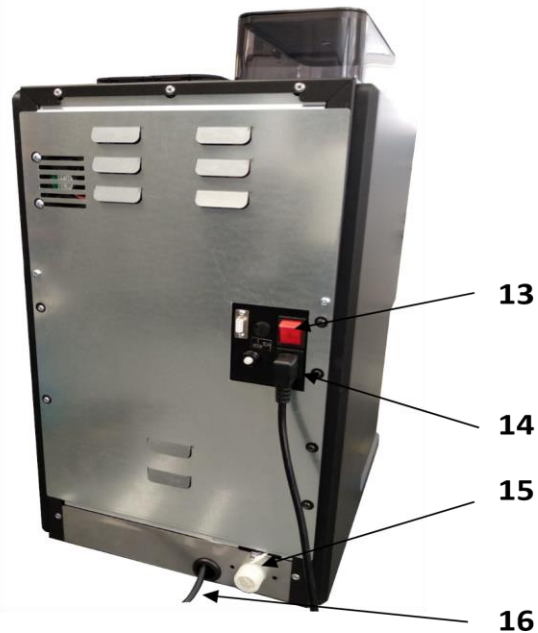


Fig. 1

1. Coffee bean container
2. Soluble product container
3. Ground coffee doser
4. Soluble product blender
5. Coffee bean group
6. Rubber threshold
7. Drip tray
8. Programming control
9. Display
10. Selection buttons
11. Cup holder
12. Tray full level
13. On/Off switch
14. Connection cable
15. Network water tap
16. Supply bundle of the fresh milk module (optional)

2. Cleaning Products

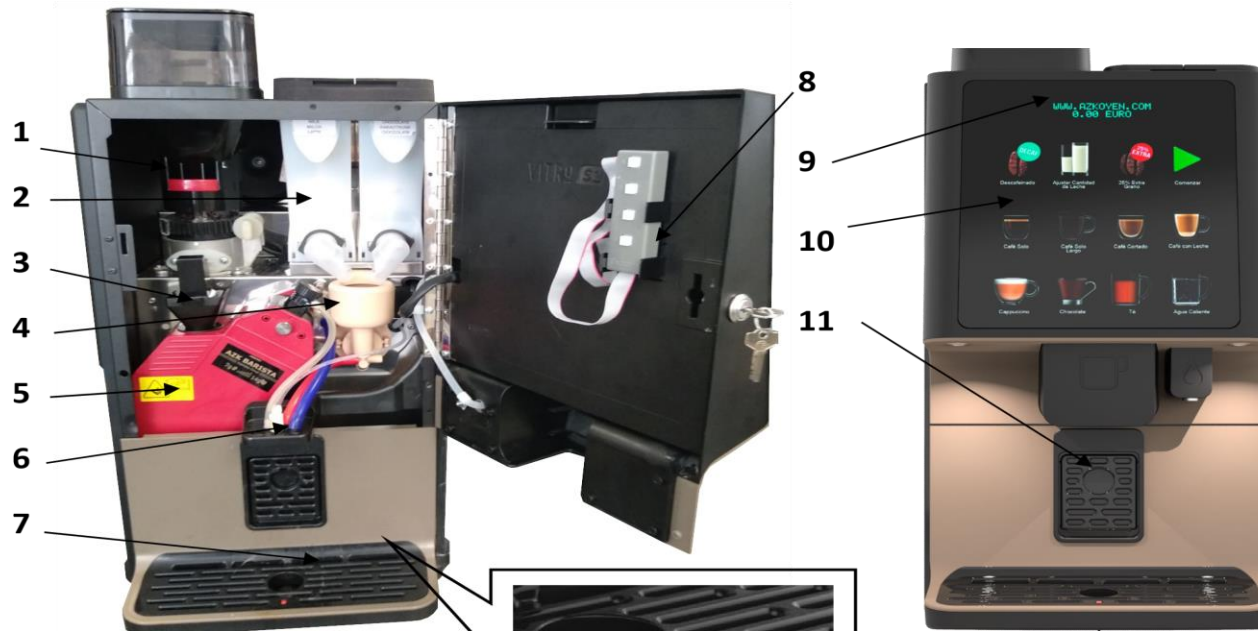

Coffee Cleaning Tablets



Milk Cleaning Containers



Milk Cleaning Solution

2. Cleaning Products



Cloths/Pipecleaners



Sanitiser Spray

3. Cleaning and Caring for Your Machine

Day one set up (Recommended on a Monday)

Run through the daily milk cleaning cycle.

Clean the coffee grinder.

Top up the milk fridge with fresh milk.

Top up the coffee bean hopper with fresh beans.

Top up hot chocolate powder dispenser (Right hand side).

Top up decaf granule dispenser (Where applicable. Left side).

Clean and dry cannister spouts.

Clean and dry drip tray and grounds bin.

Check stock levels (Beans, chocolate, granules, straws, milk, cleaning fluid).

Place order if levels are low (Report to local office manager).

Please note the coffee machine will not work if it has not been through a cleaning cycle in the past 24 hours. This is a safety feature to ensure the fresh milk pipes are clean and clear of any potential bacteria.

The cleaning cycle can not be completed with out the waste tray being inserted.

4. Daily Cleaning

STEP 1



Remove tube from milk fridge and carefully move the milk fridge to one side. Place tube into small blue container.

STEP 2



Open the front of the machine Remove grey controller from the back of the door. Press option D (machine will display place pipe in container this is referring to step above) Press D again (which will start the purge into the small container)

STEP 3



You will then be asked to change the container. Place tube into the large container and move small container to below drinks dispenser as seen in picture.

FINAL STEPS

- Put tube back into milk fridge and gently move the milk fridge back into place next to the coffee machine, ensuring there are no kinks or bends
- Empty the blue containers and stow away.
- Wipe down all areas of the machine to clear visible dirt/grounds
- Close and lock front door panel.

STEP 4



Gently squeeze the cleaning fluid bottle to fill the measuring cap to 20ml. Pour the cleaning fluid into the large blue container which now has the tube in it

STEP 5



Finally Press D again when prompted and a 10 minute countdown will display on the screen. The machine will now pump water into the container with the cleaning fluid in and start the cleaning process. Once finished the machine will beep repeatedly, press D on the internal keypad.

STEP 6



Remove and clean drip tray, ensuring it is free of excess liquid waste, and where applicable the outlet at the back is also free from debris. Refit once finished. Now complete the final steps.

5. Weekly Cleaning

STEP 1



To clean, firstly remove the cannister spouts, clean, dry and reattach, ensuring they are completely dry.

STEP 2



Then remove mixing bowl by gently pulling away from machine (bowl should pop out) Remove the red tube from left nozzle freeing the mixing bowl. Clean with warm water. Once clean refit ensuring both prongs are fitted and red pipe reattached.

STEP 3



Use a clean damp cloth with sanitiser and wiper all internal and external surfaces including inside of door.

6. Fortnightly Cleaning

STEP 1



Press button C on internal keypad, the message on Screen displays '030 TEST MACHINE' press D. Scroll through the on screen menu by pressing A until 'GROUP CLEANING' appears and then press D to select. The machine will start the deep clean.

STEP 2



When prompted insert cleaning tablet into the correct compartment (pictured left). Follow instructions on display.

STEP 3



When the machine has finished cleaning press 'C' twice to return to standby mode. Gently remove the tubes from their 'seat' (Pictured left) wipe with a clean cloth and replace. Give all visible parts of the interior a wipe to clear debris and dirt. Close the door and lock.

7. Troubleshooting

Will not dispense any drinks

Has the machine been turned off and on again?

Rocker switch located at the back of the machine. Turn off, wait 30 seconds, and turn back on. Machine will go through the set-up cycle and purge any fluid in the tubes.

Has the machine been put through the cleaning cycle in the last 24 hours?

The machine has an auto cut off if not cleaned every 24 hours, if this has not been done, please follow the step-by-step instructions to remedy. This will take approximately 15-20 minutes.

Does the machine have sufficient coffee beans?

Refill the hopper located on the top of the machine by removing the lid, pour in beans from the bag and replace lid.

Does the machine have sufficient milk supplies?

The milk is in a separate fridge to the side of the main coffee machine, to top up the milk remove the milk container from the fridge, pour in milk and replace the container. Make sure the feed tube is placed correctly in the milk container and there are no bends or kinks.

Has the waste tray been emptied?

Pull the tray forward to release, empty the coffee ground hopper into the bin and the liquid waste into the sink. Give the tray a rinse and return to the machine.

Alternatively – Where there is a bucket to collect waste Empty both the Coffee grounds waste and the liquid waste buckets.

Wipe the waste detection probe with blue roll to ensure it is clear.

Replace buckets under relevant waste shoot/tube.

Will not dispense drinks containing milk

Has the machine been put through the cleaning cycle in the last 24 hours?

The machine has an auto cut off if not cleaned every 24 hours, if this has not been done, please follow the step-by-step instructions to remedy. This will take approximately 15-20 minutes.

7. Troubleshooting Continued

Does the machine have sufficient milk supplies?

The milk is in a separate fridge to the side of the main coffee machine, to top up the milk remove the milk container from the fridge, pour in milk and replace the container. Make sure the feed tube is placed correctly in the milk container and there are no bends or kinks.

Is the milk cold enough?

The milk fridge temperature should read 5 degrees or below.

Will not dispense decaf coffee options

Are there sufficient granules in the hopper? Located top right of the machine, left hand hopper.

Will not dispense chocolate options

Is there sufficient hot chocolate powder in the hopper? Located top right, right hand hopper.



Cema Vending

T: 01157 845 845

E: service@cemavending.co.uk

W: www.cemavending.co.uk